## Installation Instructions For Curb Mount Skylights




Prepare curb with proper flashing and waterproofing membranes.

Ensure top of curb is clean and dry.



Dry fit skylight to curb to ensure proper fit.

Apply seal gasket or silicone seal to top of curb aprox. 1/2" in from outer edge.

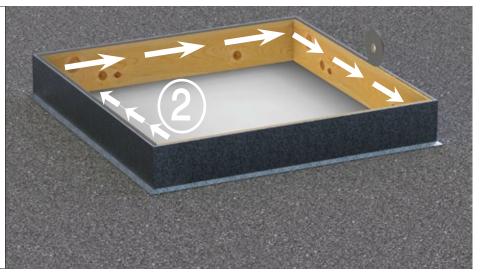

Mount skylight over curb and press down into seal. Secure skylight to curb with #10x2" wood screws through holes in flange of skylight.

